

Tip Switch Label Placement

Tip Switch

In compliance with the International and California Fire Codes, this heater is equipped with a tip switch that deactivates the heater when tilted more than 15 degrees. Please verify the tip switch is operating properly by tipping the heater no more than 20 degrees. If heater does not extinguish at 15 degrees, repairs are required. Tip switch will automatically reset 60 seconds after heater is restored to the upright position.



